

## Cartridge Change Instructions

Without Shut-Off Valve

## **CARTRIDGE REMOVAL**

- 1. Shut off water and relieve line pressure.
- Hold head firmly. Turn cartridge to left 1/4 turn until rotation stops.



 
3. Pull cartridge down and out of head.





## **CARTRIDGE REPLACEMENT**

 Align new cartridge lug with head label. Hold head firmly. Insert new cartridge fully into head.



2. Turn cartridge to right 1/4 turn until rotation stops.



- 3. Turn on water supply.
- NOW FLUSH CARTRIDGE! Run water through filter to drain for several minutes. Refer to cartridge label for specific flushing time.